REMINDER

Once you have installed your Double-Play, your television set must always be tuned to channel 3 or 4. For normal TV viewing without the picture-in-a-picture inset, you have two options:

OPTION 1, Use Double-Play to Select Viewing Channels:

A. Make sure your TV is tuned to channel 3 or 4.

B. Turn VCR off.

C. Turn Double-Play "SWAP" light on: push "SWAP" button on Double-Play remote control until the red "SWAP" light appears on console.

D. Use Double-Play's remote control to select viewing channels.

OPTION 2, Use Your VCR to Select Viewing Channels:

A. Make sure your TV is tuned to channel 3 or 4.

B. Turn VCR on.

C. Turn Double-Play "SWAP" light off: push "SWAP" button on Double-Play remote control until the red "SWAP" light on console disappears.

D. Use your VCR's remote control to select viewing channels.

REMEMBER: If you have turned off your VCR and TV and you have turned off the "SWAP" light on your Double-Play, then the next time you want to watch one channel only (no PIP), you must turn the Double-Play "SWAP" light on and use Double-play's remote control to select the channel; or, if you prefer, turn on your VCR and use its remote control to select the channel as described above.

NOTICE: The button labeled "PIP ON/OFF" in your owner's manual is actually labeled "PIP INSET" on your remote control unit.
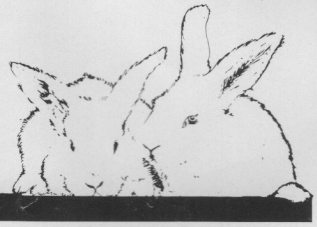
The button labeled "SWAP" in your owner's manual is actually labeled "SWAP ON/OFF" on your remote control unit.